


DUST-FREE WORKING


HMB ROUTER GUIDE 106500 FOR FRONT PLATES IN COMBINATION WITH DUST EXTRACTION (unit) 106502

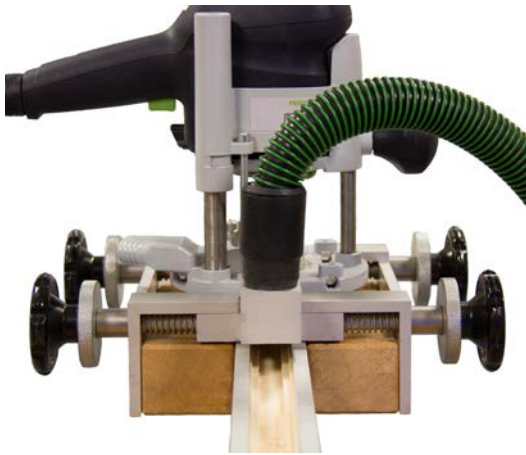

HMB Router Guide 106500 for front plates
combination with dust extraction (unit)
106502



Festool OF1010EBQ Router or
comparable

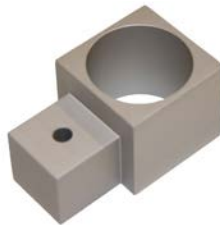

Dust extraction (unit) 106502



Extractors with TNO classification
A-class or B-class



More information is available on www.hmb.nu

Responsible use: 8 hour operation use per 8-hour working day
milling hardwood (meranti)



hardwood

CONTACT

For details on the use of this label and its interpretation refer to the TNO website below:

DUSTFREEWORKING.TNO.NL

TNO
Bakemastraat 97K
2628 VK Delft
Postbus 49
2600 AA Delft

T 088 866 33 24
E wegwijzer@tno.nl

